

Enabling/Disabling Surface Contours in Earthworks

The main function for enabling or disabling your surface contours would be to allow the operator to see linework on the screen easier. By disabling surface contours there will be significantly less colors and contour lines on the screen to distract from the design lines that they may need. Having them enabled also allows the Operator to see the changes in elevation to get a better understanding what the end result will be. Being able to enable and disable surface contours with the touch of a button gives operators more versatility in the field and more customization to fit exactly what they want.


1. Navigate to the main work screen in Earthworks
2. **Click and Hold** on the Overlays button:



3. You will then see this screen below. Enable or disable Surface (Plan & 3D View)
Select **Apply** once the settings are what the operator wants

(Go to next page for visuals)

Surface (Plan & 3D View) **ON**

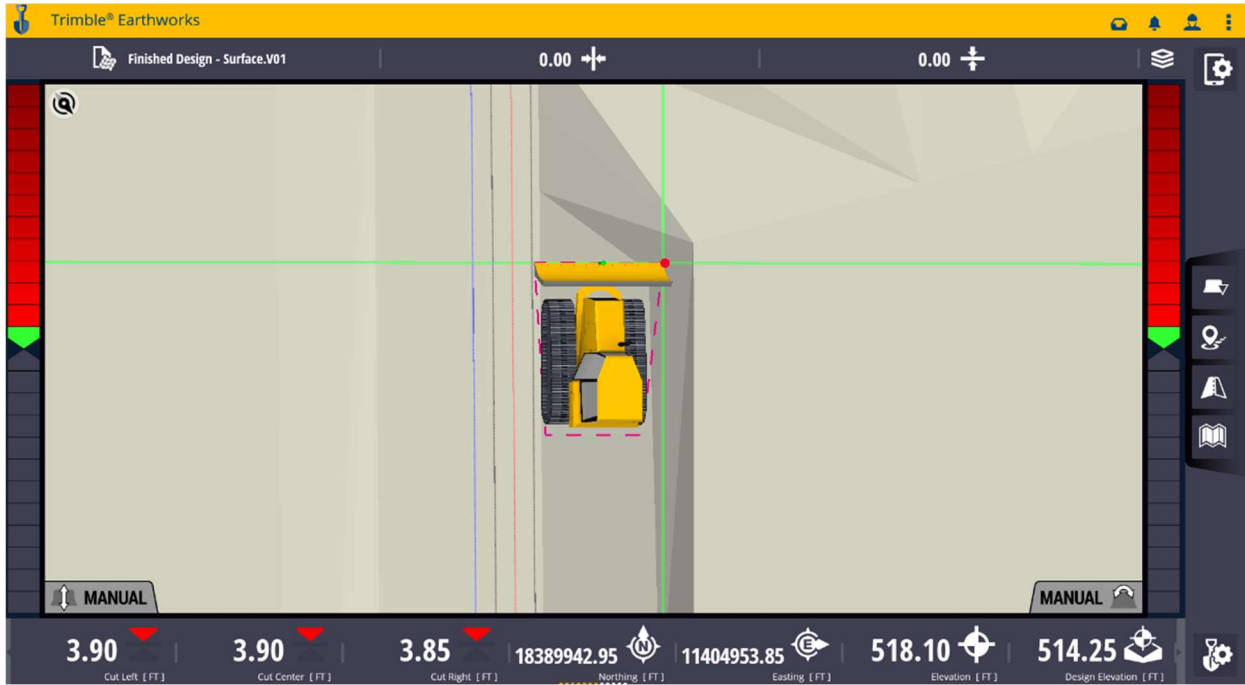

Surface (Plan & 3D View) **OFF**

