 


## File Deletion from GCS900


1. Hold in the Enter or **OK** button on the display, then push the **Power Button**
2. The display will open up in Manager Mode, which allows for more advanced settings changes in the main menu
3. Insert your USB flash drive into the port on the control box, and the File Transfer dialog will automatically appear


4. Press the **Advanced** softkey button



5. Scroll down until **Delete Designs** is highlighted, then press the **OK** button

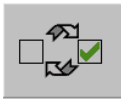

6. Scroll down to the design/s to be deleted and press the  softkey to place a green check mark next to the design name, continue to select the design to be deleted as needed

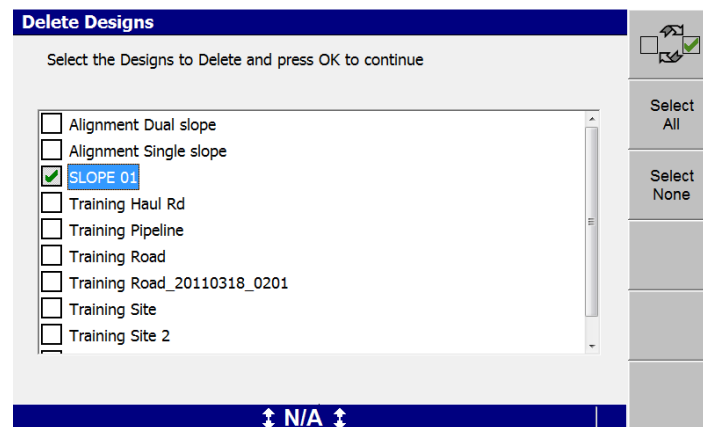

7. Once all of the designs to be deleted have been selected, press the **OK** button
8. Press the **OK** button once more to confirm the deletion of the designs
9. After the design has been deleted, press the **OK** button to return to the file transfer dialog, then remove the USB flash drive from the control box